

Please completely read and understand the entire manual before using, assembling and/or disassembling your remote controlled car.

1/16TH SCALE 4WD ELECTRIC POWERED BUGGY/TRUGGY/MONSTER TRUCK

2.4GHz RADIO SYSTEM

INSTRUCTION MANUAL

OFF ROAD TRUGGY
ITEM NO.:16882

OFF ROAD BUGGY
ITEM NO.:16881

OFF ROAD MONSTER TRUCK
ITEM NO.:16883



READY TO RUN

MODEL	NAME	LENGTH	WIDTH	HEIGHT	WHEELBASE	WHEEL SIZE	GEAR RATIO	MOTOR & BATTERY
16881	BUGGY	260mm	175mm	105mm	175mm	63mm(Dia.) 25mm(Width)	1: 9.28	RC 380 Motor & Li-ion Battery Pack (7.4V, 800mAh)
16882	TRUGGY	265mm	205mm	110mm	175mm	70mm(Dia.) 40mm(Width)	1: 11.44	
16883	MONSTER TRUCK	270mm	215mm	135mm	175mm	80mm(Dia.) 45mm(Width)	1: 11.44	

Notification: This date is subject to change without the prior notice.

The series of cars are Ready to Run with battery pack of Li-ion 7.4V ,800mAh, the charger and the adapter of the charger which is needed for charging your li-ion battery pack.

The cars feature 3-in-1 unit (ESC/receiver/ 5 wire servo) and 2.4GHz radio system, which are called entry-level hobby grade products and suitable for R/C beginners. Ball bearings and brass bushes are installed throughout the whole vehicles.

Many optional parts are available from factory and please refer to the part lists. If you perform a drive train upgrade, replace the entire system (such as motor, ESC, receiver , ball bearings and the like) so that all components are properly matched. Any malfunction incurred by custom modification or incorrect operation will void your warranty.

- This product is not a toy. It is not intended for persons under 14 years of age, unless closely supervised by an adult.
- This manual is subject to change without prior notice.





GENERAL INFORMATION

- This user's manual is designed for use with your vehicles and contains the instructions you will need to assemble, operate and maintain your vehicles.
- We know you are anxious to start driving, but it is very important that you take time to read the manual even if you are an experienced R/C driver.
- Carefully read and follow all instructions in the manual. Failure to follow the instructions will be considered abuse and/or neglect and may void the warranty.
- Your vehicle is designed to run on uneven or rough terrain. However dust, sand, water and carpet fibres can lodge in the working parts of your cars and can damage your vehicle if not removed promptly. We do not warranty your vehicle from damage due to outside elements including sand, dirt or water. The users are responsible for the maintenance and safe operation of this vehicle.
- This product is not a toy. It is not suitable for users under 14 years old unless they are supervised by adults.
- Never attempt to re-assemble any electronic components. These have been carefully calibrated at the factory.
- Only use manufactured parts to upgrade your car. If you perform a drive train upgrade, replace the entire system (Such as motor, ESC/receiver unit and the like) so that all components are properly matched. Any malfunction incurred by custom modification will void your warranty.
- Before driving your vehicle, please read this manual completely and examine your vehicle and radio control for any defects.
- For better performance, some adjustment may be necessary.
- This vehicle requires one battery pack (included in the car or in the packaging). Make sure the vehicle's batteries have a sufficient charge before driving or possible loss of control may result. The radio controller requires three AA size batteries (not include in the packaging).
- Always remove batteries from the vehicle and the radio controller when not in use.
- Please operate your vehicle in a spacious area. Never operate your vehicle in crowded street.
- This product is fully assembled at factory. We do not take any responsibility for damage and/or accidents that occur as the result of custom modifications and/or incorrect operation.

SAFETY INFORMATION

We want users to enjoy our RC vehicles and to operate them with care. Failure to operate your vehicle in a safe and responsible manner may result in injury to yourself, others or damage to property around you.

- Read and understand all instructions carefully before use and assembly/disassembly.
- Do not run your vehicle on public roads or any area where you may encounter pedestrian or vehicle traffic.
- Do not operate in a congested area or in crowds.
- Do not operate your vehicle with obstructed line of sight, at night, or near water.
- Your vehicle is radio controlled. Radio waves are subject to interference. Radio interference can cause loss of control of your vehicle.
- Take care not to cut yourself while using tools to adjust or upgrade your vehicle.
- Since the model contains many small parts, keep out of reach of children while assembling and/or disassembling.
- When turning off your model, always turn off the receiver (3-in-1 unit) first, before turning off the remote control. Always remove the batteries from your vehicle and the remote control when not in use.
- If your vehicle becomes stuck, release the throttle, then retrieve it by hand.
- Do not continue to apply the throttle or you may damage the motor and/or the ESC/receiver unit.
- Turn off your vehicle and discontinue use if it runs erratically. Not do you run it again until the issue has been found and resolved.

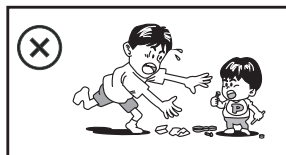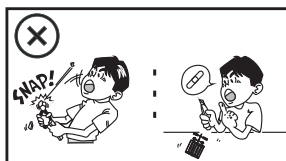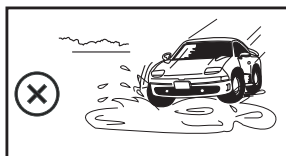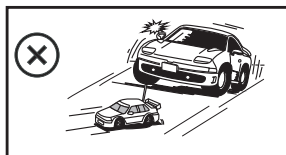

GETTING FAMILIARIZED WITH YOUR 2.4GHz RADIO SYSTEM

Your car is equipped with the new 2.4GHz radio system .Please read and understand all instructions below before operating.



A: Steering Wheel	1: Steering Trim	4: Power Switch	7: Throttle Reverse
B: Trigger	2: Steering Reverse	5: Steering Dual Rate	8: Green Indicator
C: Battery Case	3: Red Indicator	6: Throttle Trim	9: Bind(Pair) button

Steering Wheel: It proportionally operates the model's right and left steering control.

Battery Case: It requires 3pcs of AA size batteries.

Power Switch: It is used to turn the radio controller ON/OFF

Steering Dual Rate Dial: It allows you to change the amount of steering servo travel compared to the amount of physical movement of the steering wheel.

Throttle/Steering Trims: They are used to adjust the center trim of the throttle/steering channel.

Steering Reverse: It allows you to electronically switch the direction of steering servo travel. For example, if you move the steering wheel to the right and the steering servo moves to the left, flip the Steering Reverse Switch to make the steering servo move to the left.

Throttle Reverse : It allows you to electronically switch the direction that the motor operates in relation to the throttle trigger. For example, if you pull the throttle trigger to accelerate forward, but the model goes in reverse, flip the Throttle Reverse Switch to make the model accelerate forward.

Trigger: It controls the speed and braking ability of your car. Pull it to accelerate, release it to decelerate, and push it to brake. Pushing it a second time activates the reverse feature.

Indicators: It shows battery power level. Green indicator flashing means battery power is not enough.

As long as both red and green indicator goes flashing indicating that the radio controller runs out of battery power, you must replace with fresh batteries immediately.

Bind(Pair) button: It is used to bind your 2.4GHz radio system.

BATTERY INSTALLATION




- 1) Slide the battery cover as shown, and according to the illustrations of polarities, install 3pcs of AA size batteries.
- 2) Replace the battery cover after batteries are installed.

NOTES:


- Use batteries of same type.
- Remove batteries from the case if not in use.
- Always check the battery power.
- Dispose of exhausted batteries properly.

TO BIND THE RECEIVER TO THE RADIO CONTROLLER


Before running , make sure that the radio controller is bound with the receiver, which have normally been done at factory. If it is not the case, you are require to perform the binding procedure following the instructions below.

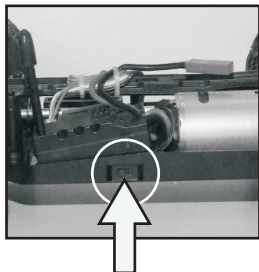


- 1) Turn on the 3-in-1 unit power switch , which is located on the side of the car.
(Note: Receiver and ESC are combined inside the 3-in-1 unit.)

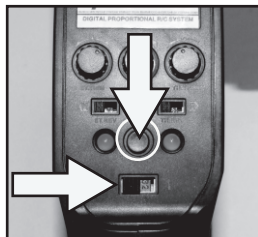

- 2) Hold the Bind(Pair) key, switching on the radio power.
This operation should be performed within 5 seconds after your receiver is turned on.

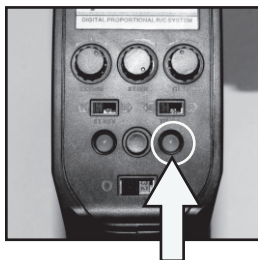


- 3) Green indicator goes flashing, meaning that the binding process is being performed in system.

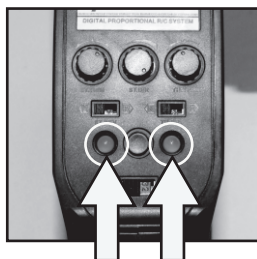

- 4) Red and green indicators being steady on means that your receiver is bound to your radio controller. Binding process is completed.


RUNNING YOUR CAR

1 TURN ON THE RADIO CONTROLLER

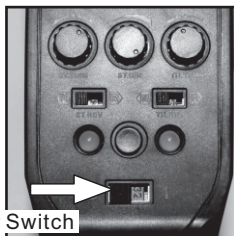

Power Switch

2 TURN ON THE RECEIVER ON YOUR CAR

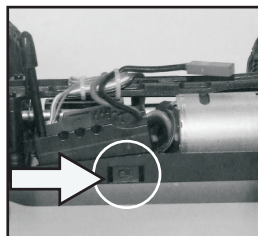

CAUTION


- Before using your car, make sure the radio controller is of enough battery power. Low battery power will lead to the loss of control of your car.
- Always turn on the remote controller firstly, and then the receiver.

3 CHECK STEERING PERFORMANCE


- Ensure good steering performance.




1) To keep the car run straight in line , do not move the control wheel.(Keep it at centre)

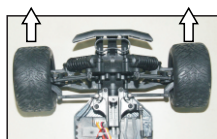


2) Turn it left to allow your vehicle turn to left.

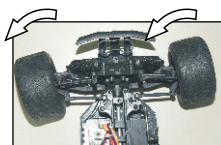

3) Turn it right to allow your vehicle turn to right.

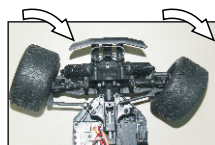

4 CHECK TRIGGER RESPONSE

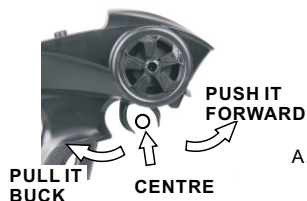

A. Pull the trigger back to accelerate, release it to decelerate and push it to brake.


B. To stop running your car, release the trigger to Neutral.

C. Pushing the trigger a second time activates the reverse feature.

5 TO TUNE THE STEERING TRIM




STEERING TRIM

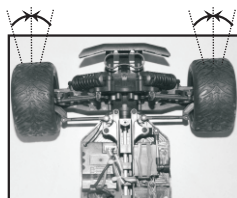


Gently pull the trigger to allow your car to run slowly. Meantime, tune the steering trim to allow the front wheels to be aligned.

 6 TO TUNE THE STEERING DUAL RATE CONTROL DIAL





STEERING D/R

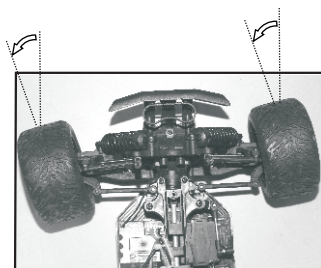

This dial adjusts the overall travel of the steering servo. Push the dial forward for maximum steering. Pull the dial back to reduce the steering level.

- Set the Steering Dual Rate Control Dial to Minimum first. To set the desired steering level increase it again whilst decelerating your vehicle.

RUNNING PRACTICE

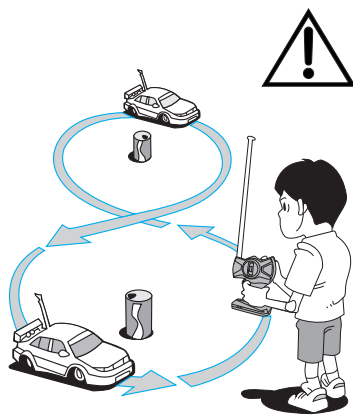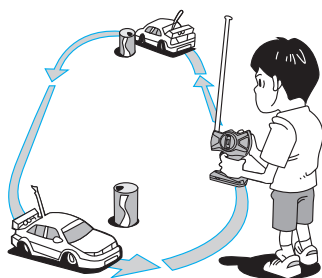


Once you become conformable driving the vehicle, perform driving practice on the tracks as shown in the figure.


Keep practising until you feel comfortable with the steering, throttle and brake at low speeds. Once you are feeling comfortable try operating on another track.

When you have mastered the basics you will be able to drive at higher speeds in a more controlled fashion.

CHARGING THE BATTERY PACK

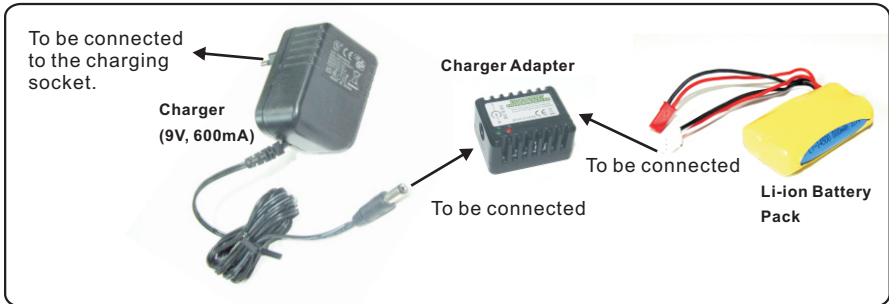


- Use only the specified charger (9V, 600mA) to charge the Li-ion battery pack.
- The charger adapter is needed during charging, on which on the one side the charger is connected and on the other side the battery pack is connected.
- Never charge the battery pack unattended.
- Always remove the battery pack from the car before charging.
- Always use the battery pack after it is fully charged.
- Charging time is normally around 2 hours and a half.
- The red indicator on the adapter lights up, which means charging is being performed.
- As long as charging is complete, the green indicator lights up.

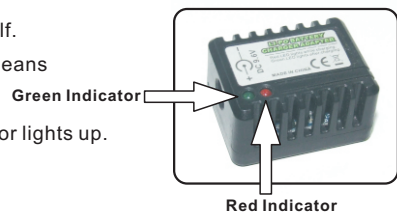


STOPPING YOUR CAR

1 TURN OFF THE RECEIVER ON YOUR CAR

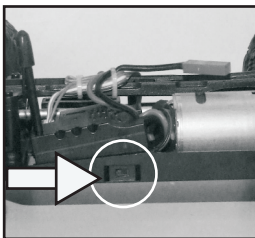

2 TURN OFF THE RADIO CONTROLLER

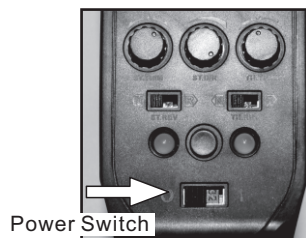

CAUTION

- Always switch off the receiver, and then the radio controller.

3 REMOVE BATTERIES

- Do not forget to remove batteries from your car and radio controller when not in use.

MAINTAINING YOUR CAR

After running your car, the following procedures should be performed regularly and will help to maintain your car's performance.

- Inspect your car for any obvious damage.
- Check the gears for wear, debris or broken/slipping teeth.
- Check the wheels and tighten the wheel screws properly.
- Check for loose screws in the chassis.
- Check the wiring for frayed or damaged wires or connectors.
- Check the steering servo which will wear out over time and require replacement.
- Check all batteries.
- Keep the chassis clean and free of sand, dust and moisture.
- Remove and clean the motor if necessary. (Never attempt to re-assemble the motor, you will damage it and void the warranty).
- Clean the car body with a soft lint-free cloth.
- Remove all batteries if you are from the car when not in use.

TROUBLESHOOTING

A. The vehicle does not work at all.

1. Check to see if transmitter and car are on.
2. Check to see if TX/RX are properly bound.
3. Adjust throttle trim on transmitter
4. Replace batteries.

B. The vehicle runs slow.

1. Replace or charge the battery pack and/or the radio batteries.
2. Make sure the vehicle is geared properly and the pinion and spur gear are over tightened.
3. Clean all bushings or ball bearings.
4. Check for stripped or dirty gears.

C. The throttle works, but it can not steer.












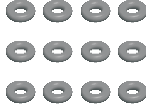















1. Check if the servo feels jammed, try centering it by hand.
2. Check the whole steering system.


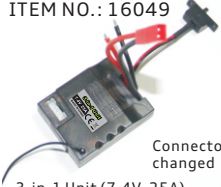
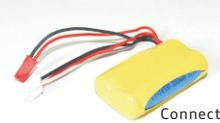

























D. It steers, but throttle is uncontrollable.

1. Adjust the throttle trim.
2. Replace or charge the battery pack and/or the radio batteries.

E. The vehicle runs noisily.

1. Check gear mesh between spur gear and pinion.
2. Check for stripped and/or dirty gears.
3. Clean and oil bushings or ball bearings.

<p>ITEM NO.: 16810</p>  <p>2PCS Steering Bush+ Steering Post +E-clip(2mm/4mm)</p>	<p>ITEM NO.: 16003</p>  <p>4PCS Suspension Hinge Pins-Outside</p>	<p>ITEM NO.: 16004</p>  <p>4PCS Suspension Hinge Pins-Inside</p>	<p>ITEM NO.: 16005</p>  <p>4PCS Shock Coils</p>
<p>ITEM NO.: 16006</p>  <p>2PCS Drive Shafts (Fr./Rr.)</p>	<p>ITEM NO.: 16007</p>  <p>2PCS Steering Load Spring</p>	<p>ITEM NO.: 16008</p>  <p>12PCS Brass Bushes (5*8*2.5mm)</p>	<p>ITEM NO.: H011</p>  <p>6PCS Ball Bearings (5*8*2.5mm) 6P</p>
<p>ITEM NO.: H030</p>  <p>6PCS Ball Bearings (7*11*3mm) 6P</p>	<p>ITEM NO.: 16811</p>  <p>16PCS 6.3*12.5*0.2mm(16P) Washers</p>	<p>ITEM NO.: 16012</p>  <p>1PCS Servo Linkage Set</p>	<p>ITEM NO.: 16013</p>  <p>12PCS O-Ring (For Spur Gear)</p>
<p>ITEM NO.: 16014</p>  <p>8PCS Steering Hub Step Screws</p>	<p>ITEM NO.: 16015</p>  <p>1PCS Chassis</p>	<p>ITEM NO.: 16016</p>  <p>1PCS Upper Deck+ Motor Mount Guard</p>	<p>ITEM NO.: 16017</p>  <p>2PCS Front Gear Box Assembly+ Rear Gear Box Cover</p>
<p>ITEM NO.: 16018</p>  <p>1PCS Servo Guard+ Battery Cover+ Motor Mount</p>	<p>ITEM NO.: 16020</p>  <p>1PCS Diff. Gears + Diff. Case</p>	<p>ITEM NO.: 16021</p>  <p>2PCS Front Lower Suspension Arm (Left/Right)</p>	<p>ITEM NO.: 16022</p>  <p>2PCS Rear Lower Suspension Arm (Left/Right)</p>
<p>ITEM NO.: 16023</p>  <p>6PCS Front Upper Linkage Set (2P) Rear Upper Linkage Set (2P) Steering Linkage Set (2P)</p>	<p>ITEM NO.: 16024</p>  <p>4PCS Shocks Assembly</p>	<p>ITEM NO.: 16025</p>  <p>1PCS Steering Assembly + Antenna Mount+Servo Arm +Gear Bush</p>	<p>ITEM NO.: 16026</p>  <p>8PCS Diff. Outdrive Cups (4P) + Wheel Shafts 4P(Fr./Rr.)</p>
<p>ITEM NO.: 16027</p>  <p>4PCS Steering Knuckles (Left/Right) +Rear Hub Carriers (Left/Right)</p>	<p>ITEM NO.: 16028</p>  <p>2PCS Front Hub Carriers(Left/Right)</p>	<p>ITEM NO.: 88021</p>  <p>13PCS Ball Joint Set (φ3.8mm)</p>	<p>ITEM NO.: 16047</p>  <p>1PCS Diff. Assembly- Complete (Fr./Rr.)</p>










<p>ITEM NO.: 16048</p>  <p>Motor RC 380 (25000rpm)</p>	<p>ITEM NO.: 16049</p>  <p>Connector changed 3-in-1 Unit (7.4V, 25A)</p>	<p>ITEM NO.: 16050</p>  <p>Connector changed Li-ion Battery Pack (7.4V, 800mAh)</p>	<p>ITEM NO.: 16051</p>  <p>5-Wire Servo (19g)</p>
<p>ITEM NO.: H021</p>  <p>12PCS</p> <p>Small Body Clips A/B</p>	<p>ITEM NO.: P011</p>  <p>8PCS</p> <p>Small Zip Ties</p>	<p>ITEM NO.: P100</p>  <p>12PCS</p> <p>Body Clip Cushions</p>	<p>ITEM NO.: 16070</p>  <p>Charger Adaptor</p>
<p>ITEM NO.: 16073</p>  <p>8PCS</p> <p>Motor Mount Washers (2.6*6*0.3mm)</p>	<p>ITEM NO.: 16081</p>  <p>8PCS</p> <p>Gear Box Washers (8.2*10.6*0.3mm)</p>	<p>ITEM NO.: E770</p>  <p>The pannel and the control wheel in color of black 3-In-1 2.4GHz radio controller (60M)</p>	<p>ITEM NO.: P019</p>  <p>2PCS</p> <p>Receiver Antenna Pipe</p>
<p>ITEM NO.: S011</p>  <p>12PCS</p> <p>Countersunk Self Tapping Screw 2*15mm</p>	<p>ITEM NO.: S013</p>  <p>12PCS</p> <p>Countersunk Screw 2.5*8mm</p>	<p>ITEM NO.: S016</p>  <p>12PCS</p> <p>Set Screw M3*3mm</p>	<p>ITEM NO.: S020</p>  <p>12PCS</p> <p>Countersunk Self Tapping Screw 2.6*8mm</p>
<p>ITEM NO.: S029</p>  <p>12PCS</p> <p>Washer Head Self Tapping Screw 2.6*10mm</p>	<p>ITEM NO.: S061</p>  <p>12PCS</p> <p>Countersunk Self Tapping Screw 2.6*6mm</p>	<p>ITEM NO.: S062</p>  <p>12PCS</p> <p>Countersunk Screw 3*10mm</p>	<p>ITEM NO.: S089</p>  <p>12PCS</p> <p>Washer Head Self Tapping Screw 2.6*6mm</p>
<p>ITEM NO.: S091</p>  <p>12PCS</p> <p>Washer Head Self Tapping Screw 2.5*22mm</p>	<p>ITEM NO.: S100</p>  <p>12PCS</p> <p>Washer Head Self Tapping Screw 2.5*8mm</p>	<p>ITEM NO.: S120</p>  <p>12PCS</p> <p>Flange Head Self Tapping Screw 2.3*4mm</p>	<p>ITEM NO.: S138</p>  <p>12PCS</p> <p>Countersunk Self Tapping Screw 2.6*10mm</p>
<p>ITEM NO.: S149</p>  <p>12PCS</p> <p>Flange Head Self Tapping Screw 2*8mm</p>	<p>ITEM NO.: 16057</p> <p>TRUGGY / MONSTER TRUCK ONLY</p>  <p>Motor Pinion (13T) + Set Screw (3*3mm)</p>	<p>ITEM NO.: 16058</p> <p>BUGGY ONLY</p>  <p>Motor Pinion (16T) + Set Screw (3*3mm)</p>	<p>ITEM NO.: S153</p>  <p>12PCS</p> <p>Countersunk Screw 2.5*5mm</p>

<p>ITEM NO.: 16001 <u>BUGGY / TRUGGY ONLY</u></p>  <p>Centre Drive Shaft</p>	<p>ITEM NO.: 16090 <u>MONSTER TRUCK ONLY</u></p>  <p>Centre Drive Shaft (Needed for installing slipper clutch)</p>	<p>ITEM NO.: 16019 <u>BUGGY / TRUGGY ONLY</u></p>  <p>Spur Gear</p>	<p>ITEM NO.: 16091 <u>MONSTER TRUCK ONLY</u></p>  <p>Slipper Spur Gear Unit</p>
<p>ITEM NO.: 16093 <u>MONSTER TRUCK ONLY</u></p>  <p>Slipper Clutch Pads/Disks</p>	<p>ITEM NO.: 16094 <u>MONSTER TRUCK ONLY</u></p>  <p>Slipper Clutch Spring/Ball Bearing/Locks + O-ring + Shim</p>	<p>ITEM NO.: 16036 <u>BUGGY ONLY</u></p>  <p>Wheel Hex. (Buggy)</p>	<p>ITEM NO.: 16037 <u>TRUGGY / MONSTER TRUCK ONLY</u></p>  <p>Wheel Hex. (Truggy/Monster Truck)</p>
<p>ITEM NO.: 16029 <u>BUGGY / TRUGGY ONLY</u></p>  <p>Diff. Pinion Gears 2PCS</p>	<p>ITEM NO.: 16092 <u>MONSTER TRUCK ONLY</u></p>  <p>Diff. Pinion Gears (Needed for installing slipper clutch)</p>	<p>ITEM NO.: 16030 <u>TRUGGY / MONSTER TRUCK ONLY</u></p>  <p>Body Posts (Fr./Rr.) 4PCS</p>	<p>ITEM NO.: 16031 <u>BUGGY ONLY</u></p>  <p>Body Posts (Fr./Rr.) 2PCS</p>
<p>ITEM NO.: 16032 <u>BUGGY ONLY</u></p>  <p>Front Shock Tower+Rear Shock Tower</p>	<p>ITEM NO.: 16033 <u>TRUGGY / MONSTER TRUCK</u></p>  <p>Front Shock Tower+Rear Shock Tower</p>	<p>ITEM NO.: 16034</p>  <p>Rear Front Front Bumper (Buggy)+ Rear Bumper (Buggy/Truggy/ Monster Truck)</p>	<p>ITEM NO.: 16035 <u>TRUGGY / MONSTER TRUCK ONLY</u></p>  <p>Front Bumpers+Bumper Brace</p>
<p>ITEM NO.: 16038 <u>BUGGY ONLY</u></p>  <p>Off Road Wing +Wing Stay</p>	<p>ITEM NO.: 16039W <u>BUGGY ONLY</u></p>  <p>White Wheel Rims (Fr./Rr.)</p>	<p>ITEM NO.: 16039K <u>BUGGY ONLY</u></p>  <p>Black Wheel Rims (Fr./Rr.)</p>	<p>ITEM NO.: 16040 <u>BUGGY ONLY</u></p>  <p>Pin Tires +Sponge (Buggy)</p>
<p>ITEM NO.: 16041W <u>BUGGY ONLY</u></p>  <p>W/white rims Wheels Complete (Buggy)</p>	<p>ITEM NO.: 16041K <u>BUGGY ONLY</u></p>  <p>W/black rims Wheels Complete (Buggy)</p>	<p>ITEM NO.: 16042W <u>TRUGGY / MONSTER TRUCK ONLY</u></p>  <p>White Wheel Rims (Fr./Rr.)</p>	<p>ITEM NO.: 16042K <u>TRUGGY / MONSTER TRUCK ONLY</u></p>  <p>Black Wheel Rims (Fr./Rr.)</p>
<p>ITEM NO.: 16043 <u>TRUGGY ONLY</u></p>  <p>Flame Tires +Sponge (Truggy)</p>	<p>ITEM NO.: 16044W <u>TRUGGY ONLY</u></p>  <p>W/white rims Wheels Complete (Truggy)</p>	<p>ITEM NO.: 16044K <u>TRUGGY ONLY</u></p>  <p>W/black rims Wheels Complete (Truggy)</p>	<p>ITEM NO.: 16045 <u>MONSTER TRUCK ONLY</u></p>  <p>TREAD TIRES+SPONGE (Truck)</p>
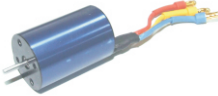
<p>ITEM NO.: 16046W</p> <p>MONSTER TRUCK ONLY</p>  <p>W/white rims Wheels Complete (Truck)</p>	<p>ITEM NO.: 16046K</p> <p>MONSTER TRUCK ONLY</p>  <p>W/black rims Wheels Complete (Truck)</p>		
<p>ITEM NO.: 16071</p> <p>BUGGY ONLY</p>  <p>Wheel Nut Screws (2.6*12mm) 8PCS</p>	<p>ITEM NO.: 16072</p> <p>TRUGGY / MONSTER TRUCK ONLY</p>  <p>Wheel Nut Screws (2.6*15mm) 8PCS</p>	<p>ITEM NO.: S128</p> <p>BUGGY ONLY</p>  <p>Countersunk Self Tapping Screw 2.3*6mm 12PCS</p>	<p>ITEM NO.: S150</p> <p>BUGGY ONLY</p>  <p>Round Head Self Tapping Screw 2.6*8mm 12PCS</p>
<p>ITEM NO.: 16052</p> <p>EUROPE STANDARD</p>  <p>Charger (EU STANDARD), 9V, 600mA</p>	<p>ITEM NO.: 16053</p> <p>AMERICA STANDARD</p>  <p>Charger (AMERICA STANDARD), 9V, 600mA</p>	<p>ITEM NO.: 16054</p> <p>U.K. STANDARD</p>  <p>Charger (U.K. STANDARD), 9V, 600mA</p>	<p>ITEM NO.: 16055</p> <p>AUSTRALIA STANDARD</p>  <p>Charger (AUSTRALIA STANDARD), 9V, 600mA</p>

OPTIONAL PARTS


1-16 FOUR WHEEL DRIVE VEHICLES

<p>ITEM NO.: 16800</p>  <p>Alum. Capped Oil Filled Shocks. + Ball Joints (Fr./Rr.)</p>	<p>ITEM NO.: 16801</p>  <p>Slipper Clutch Assembly + Modified rear diff. pinion gear + Modified Centre Drive Shaft</p>	<p>ITEM NO.: 16802</p>  <p>Brushless Motor</p>	<p>ITEM NO.: 16803</p>  <p>Brushless ESC</p>
<p>ITEM NO.: 16804</p>  <p>Ball Bearings (8*12*3.5mm) 6P</p>	<p>ITEM NO.: 16805</p>  <p>Motor Cooling Heat Sink</p>	<p>ITEM NO.: 16806</p>  <p>Brushless ESC Cooling Fan + Mounting Screws (4P)</p>	<p>ITEM NO.: E775</p>  <p>The pannel and the control wheel in color of titanium 2.4GHz radio controller (150M)</p>
<p>ITEM NO.: E710</p>  <p>Independent 2.4GHz Receiver</p>			

ITEM NO.: 16801= ITEM NO.: 16090 +ITEM NO.: 16091 +ITEM NO.: 16092+ITEM NO.: 16093+ITEM NO.: 16094

Warning: If you perform a drive train upgrade, replacethe entire system (Such as motor, ESC/receiver unit and the like) so that all components are properly matched. Any malfunction incurred by custom modification will void your warranty.


UNITS ASSEMBLY VIEW

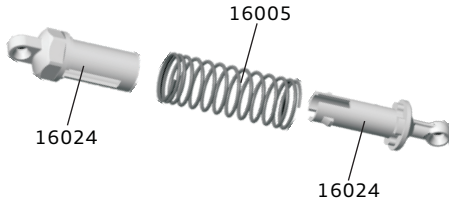


➡ SHOCK ASSEMBLY




FINISHED

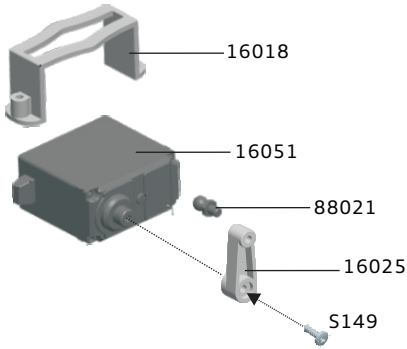


➡ SERVO INSTALLATION

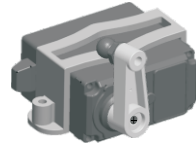



FINISHED

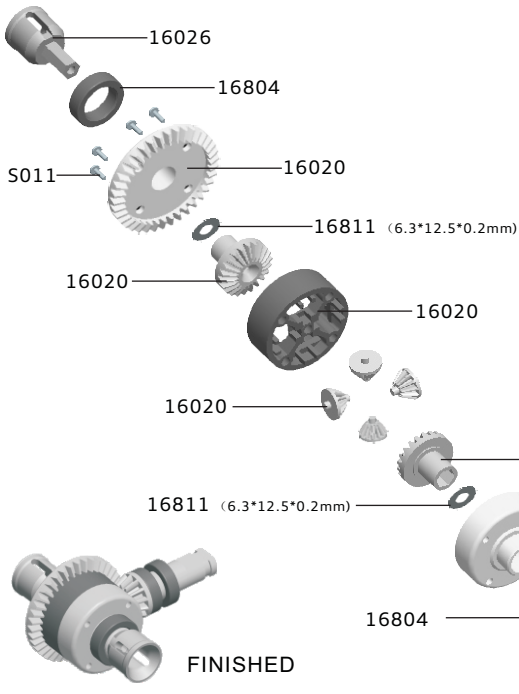


➡ DIFF. ASSEMBLY (Fr./Rr.)
BUGGY/TRUGGY ONLY

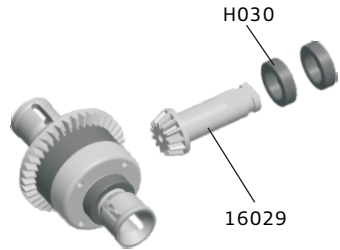

FINISHED

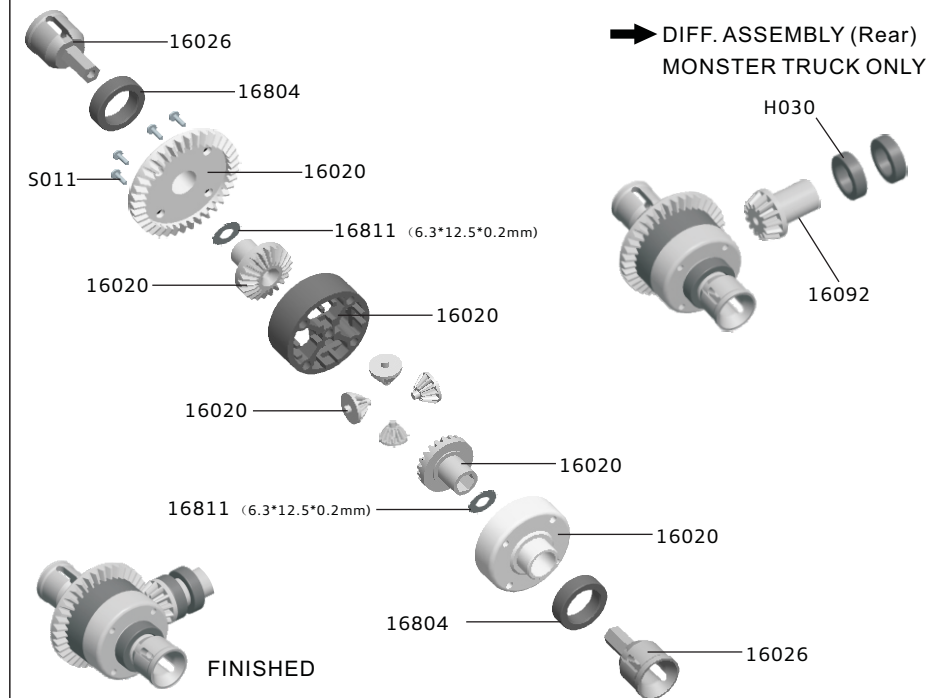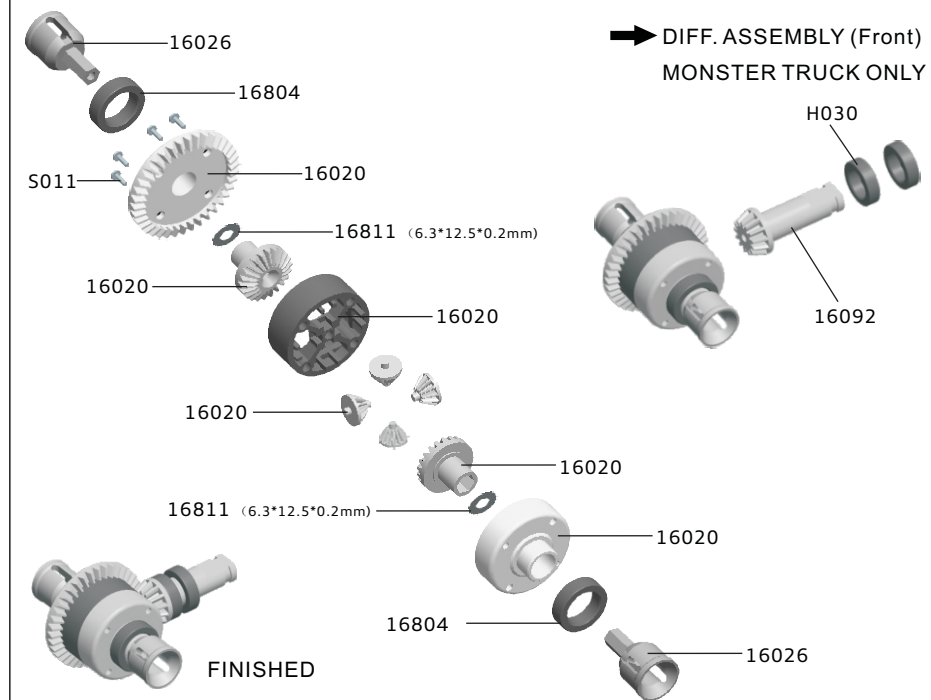


STEERING ASSEMBLY VIEW

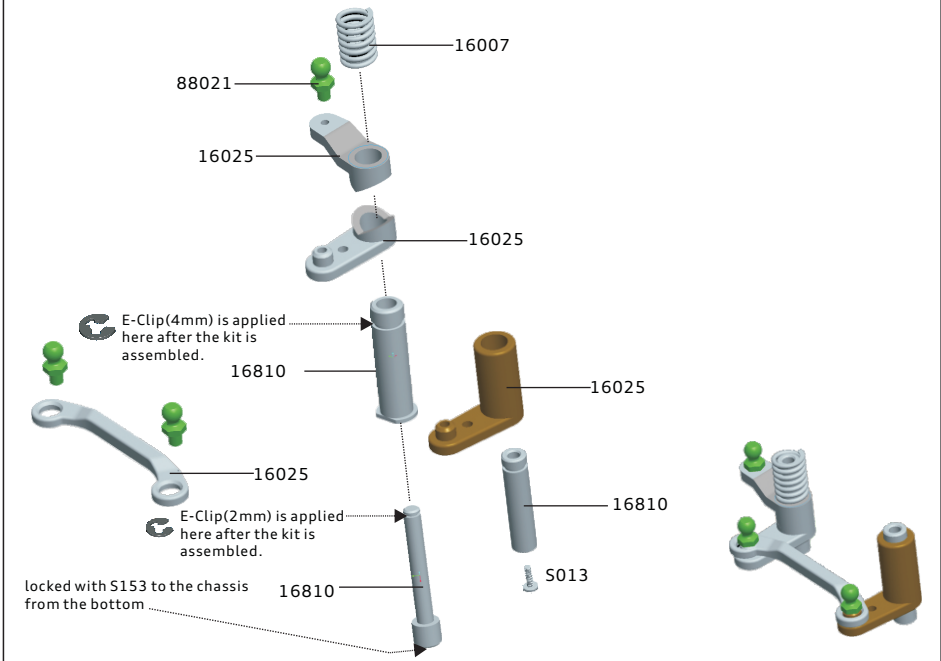


MONSTER TRUCK ONLY

(It can be an optional part for buggy or truggy)

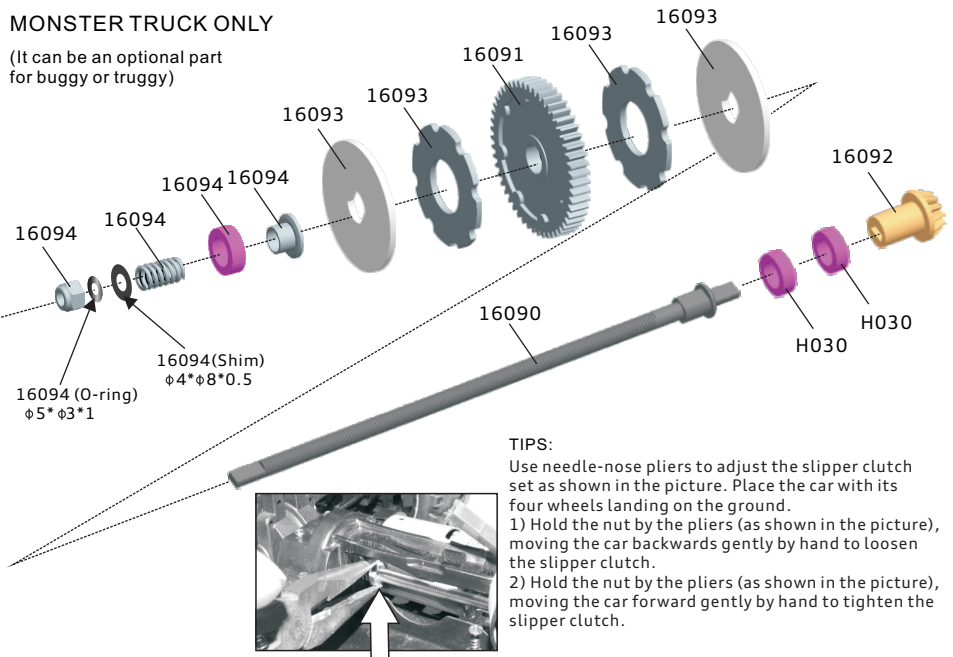


EXPLODED VIEW

1-16TH SCALE 4WDELECTRIC OFF ROAD BUGGY

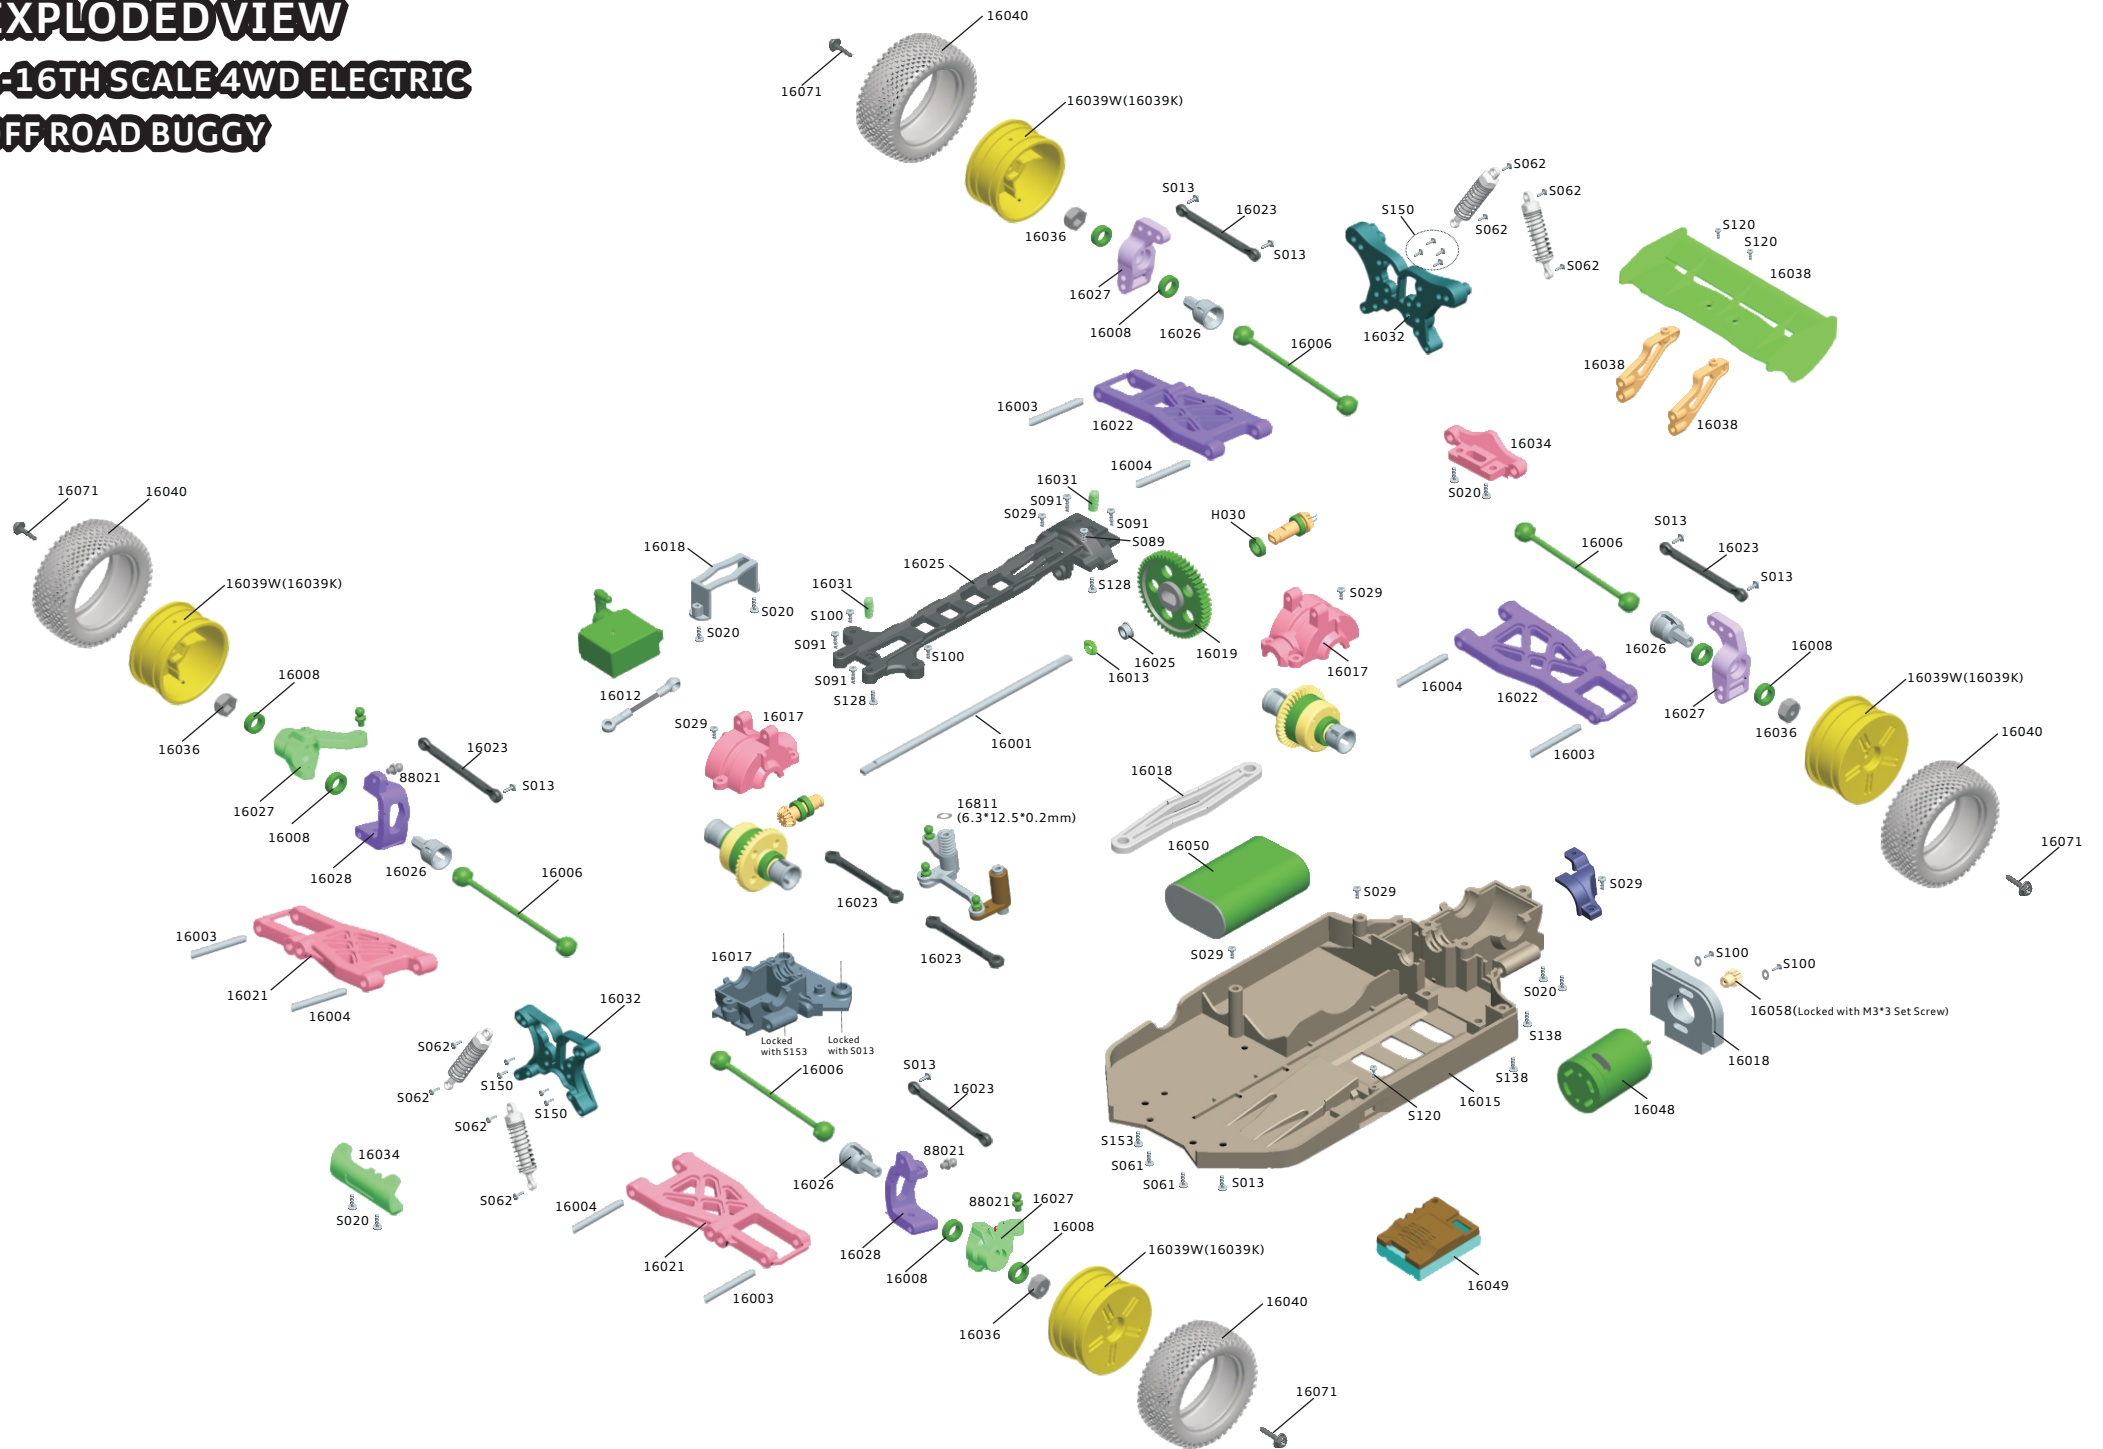

EXPLODED VIEW
1-16TH SCALE 4WDELECTRIC
OFF ROAD TRUGGY

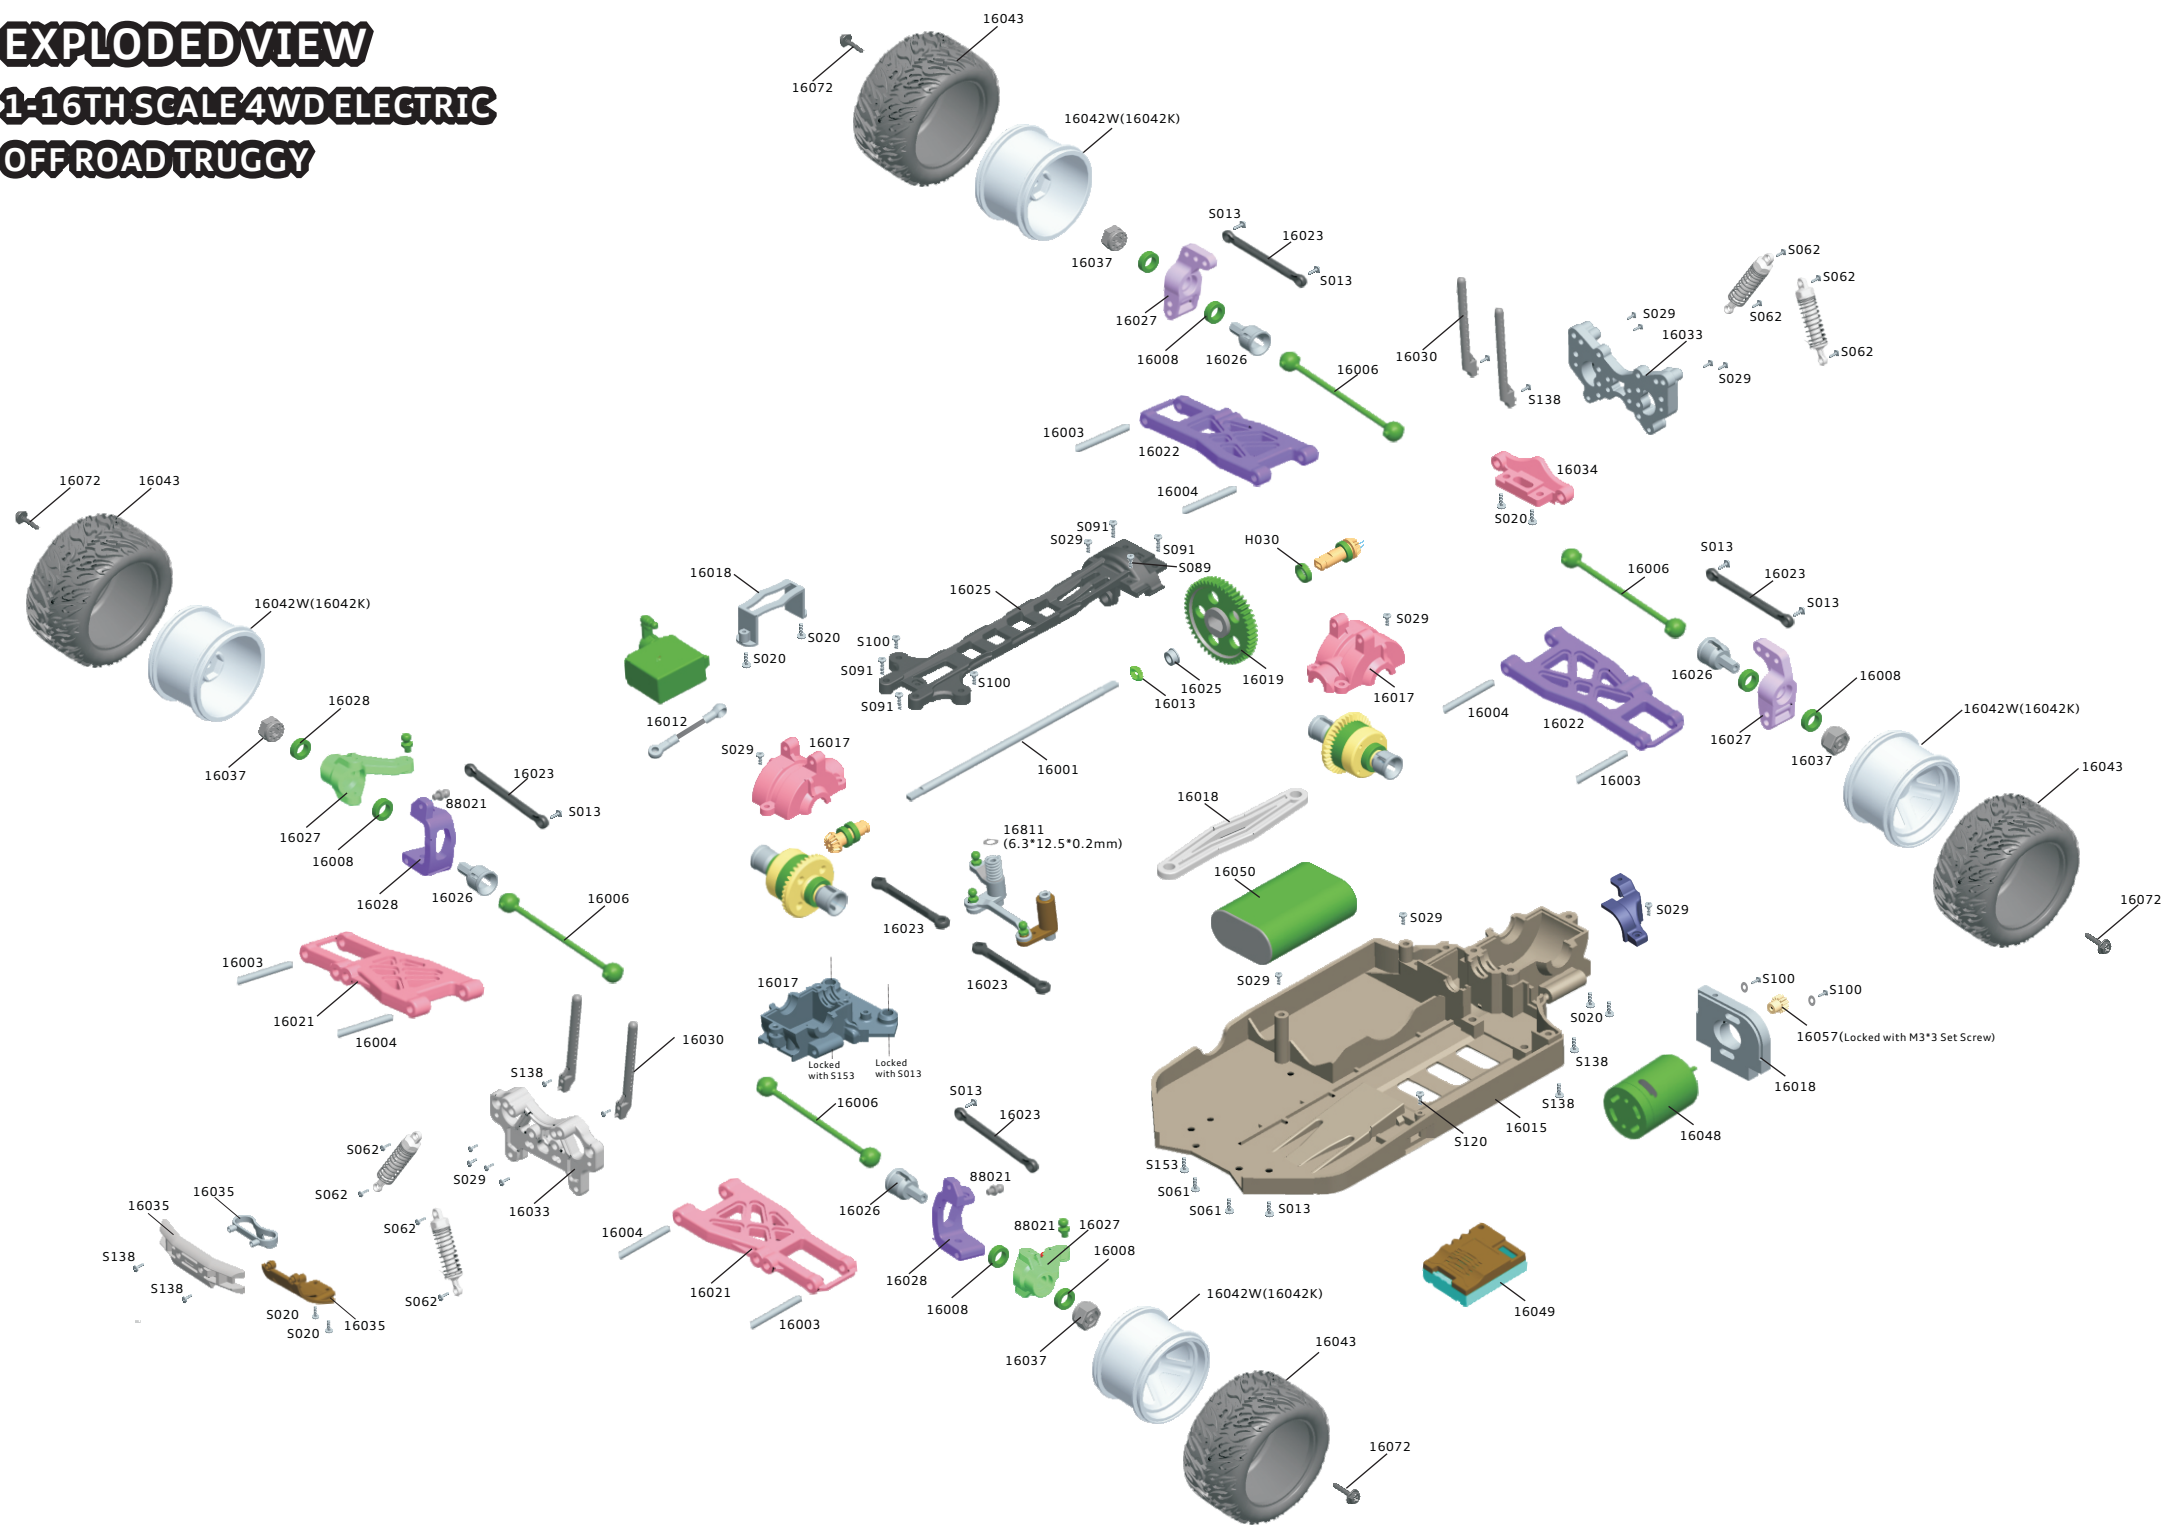

OFF ROAD MONSTER TRUCK



OFF ROAD MONSTER TRUCK

Please completely read and understand the entire manual before using, assembling and/or disassembling your remote controlled car.

Thank for purchasing our product.

This product is an authentic remote controlled vehicle (RC vehicle). It is not a toy.

Read and understand this instruction manual thoroughly before operating the vehicle.

If you are not familiar with RC vehicles, we recommend that seek out RC experts for reliable advice.

WARNINGS

- This R/C vehicle is intended for persons over 14 years of age. Children under 14 years of age should only operate this car under adult supervision.
- To avoid losing control of your car, do not operate near other electric remote controlled products.
- Please operate your vehicle in a spacious area. Never operate your vehicle in crowded street.
- This product is fully assembled at factory. We do not take any responsibility for damage and/or accidents that occur as the result of custom modifications and/or incorrect operation.